




WID380

300 Mbps Wireless Enhanced USB Adapter

User Manual

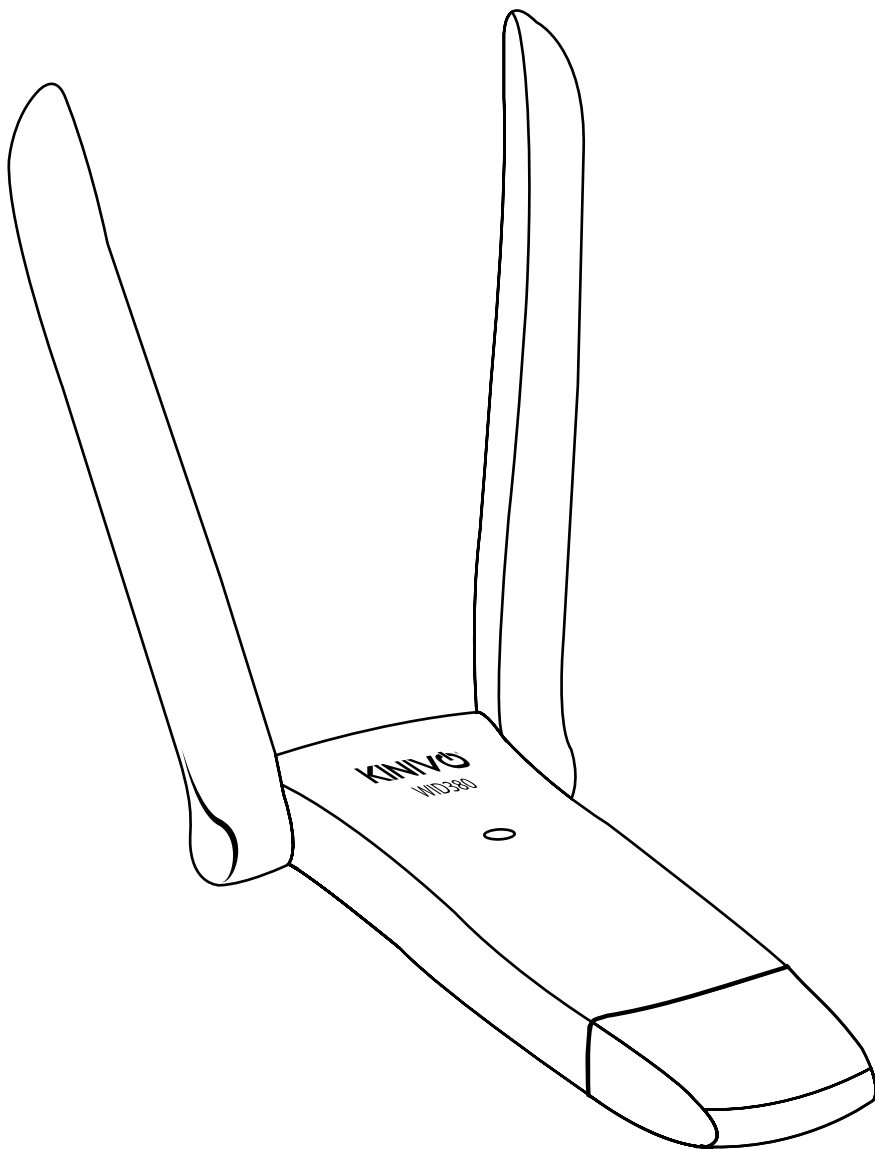

© 2012 Kinivo LLC. All rights reserved.

Kinivo is a trademark of Kinivo LLC. Bluetooth word mark and the Bluetooth logo are registered trademarks of Bluetooth SIG. All other trade names are registered trademarks of respective manufacturers. This manual may not be copied in any media or form without the written consent of Kinivo LLC.

www.kinivo.com
Technical Support (Email) : support@kinivo.com

Table of Contents

| | |
|--|-----------|
| ● Important Safety Instructions | 3 |
| ● Product Overview | 3 |
| 1. Package Contents..... | 3 |
| 2. Features..... | 3 |
| 3. System Requirements..... | 3 |
| ● Operation | 3 |
| 1. Windows Installation (XP, Vista, 7)..... | 4 |
| 2. Connecting to a wireless network (Windows 7)..... | 8 |
| 3. Installing on Mac OS X (10.5 and newer) | 11 |
| 4. Installing on Linux (Kernel 2.6 and newer)..... | 14 |
| ● Troubleshooting and FAQ | 15 |
| ● Technical Specifications | 15 |
| 1. Hardware Features | 15 |
| 2. Wireless Features | 15 |
| 3. Other Information | 16 |
| ● FCC Statement | 16 |
| ● Warranty | 17 |
| ● Contact Us | 17 |

Read all safety and operation instructions before installing and using your WID380 Wireless Adapter.

Warning: To reduce the risk of fire or electric shock, do not expose this USB adapter to water or moisture.

Important Safety Instructions

1. Do not expose the WID380 to liquid, moisture or areas of high humidity.
2. Do not expose the WID380 to extremely high or low temperatures.
3. Do not attempt to open or modify the WID380 in any way.
4. Always dispose of the packaging and unit in accordance with the local regulations and in a responsible manner.
5. To avoid electronic interference and/or compatible conflicts, do not use the WID380 in any facilities where posted notices instruct you to do so. For example: Aircraft, Military Base, Hospital or Health Care Facilities.
6. Keep away of fire, water, and high voltage equipment's.
7. Store the WID380 in a cool dry place.

Product Overview

WID380 is a 802.11n USB dongle that can allow you to connect to Wifi networks with speeds upto 150/300 Mbps (fully compatible with 802.11b/g). It has a small form factor and can be connected to any Windows (7, Vista), Linux or Mac computer via USB. WID380 has built-in antenna that enhances the signal strength and throughput while consuming minimal power from the host computer.

Please refer to this manual for installation procedure and contact us at support@kinivo.com if you have any questions or concerns.

1. Package Contents

- WID380 Wireless N USB Adapter
- Software CD (contains driver and user manual)

2. Features

- Wireless N speeds up to 150/300Mbps. Please note that the actual throughput/speed will depend on distance and other conditions.
- Backward-compatible with 802.11b/g devices.
- Wifi security modes include WEP, WPA, WPA2, and WPS
- Supports Ad-Hoc (Client to Client) and Infrastructure (AP to Client) modes.


3. System Requirements

Minimum computer requirements:

- CD Drive (for driver installation). Alternatively the drivers and the manual can be
- Downloaded from <http://support.kinivo.com>
- 733MHz CPU or faster
- 64MB Memory or higher
- Operating System
 - Windows XP or higher
 - Linux 2.6 or newer
 - Mac OS X 10.4 or newer

Operation

To use the WID380 Wireless-N USB Adapter, simply plug the device into an available USB slot on the computer or laptop.

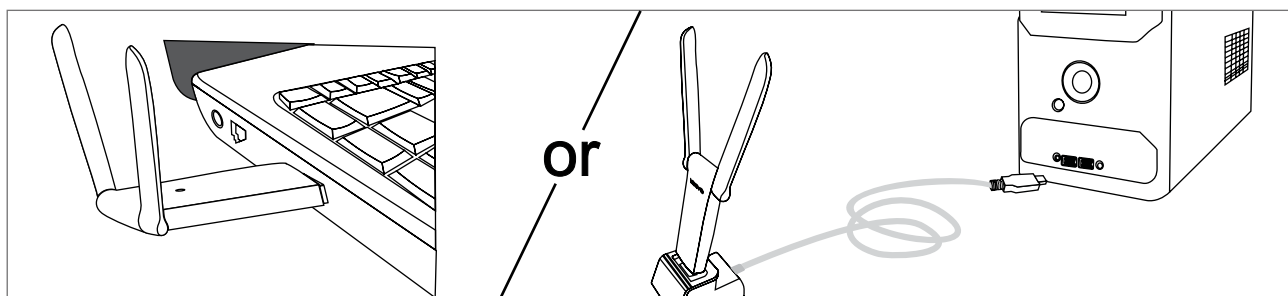


If the drivers have not been loaded previously, continue by installing the drivers for your respective operating system (see the following sections).

Note: Under normal operation, the WID380 LED indicator will turn on when plugged in. When the adapter is in use, the LED indicator will blink.


1. Windows Installation (XP, Vista, 7)

Note: You will be required to restart your computer after installing.


1. Insert the Kinivo Software CD and run the setup when prompted. Alternatively, you can download the drivers from support.kinivo.com.
2. Click Install to start the installation process.

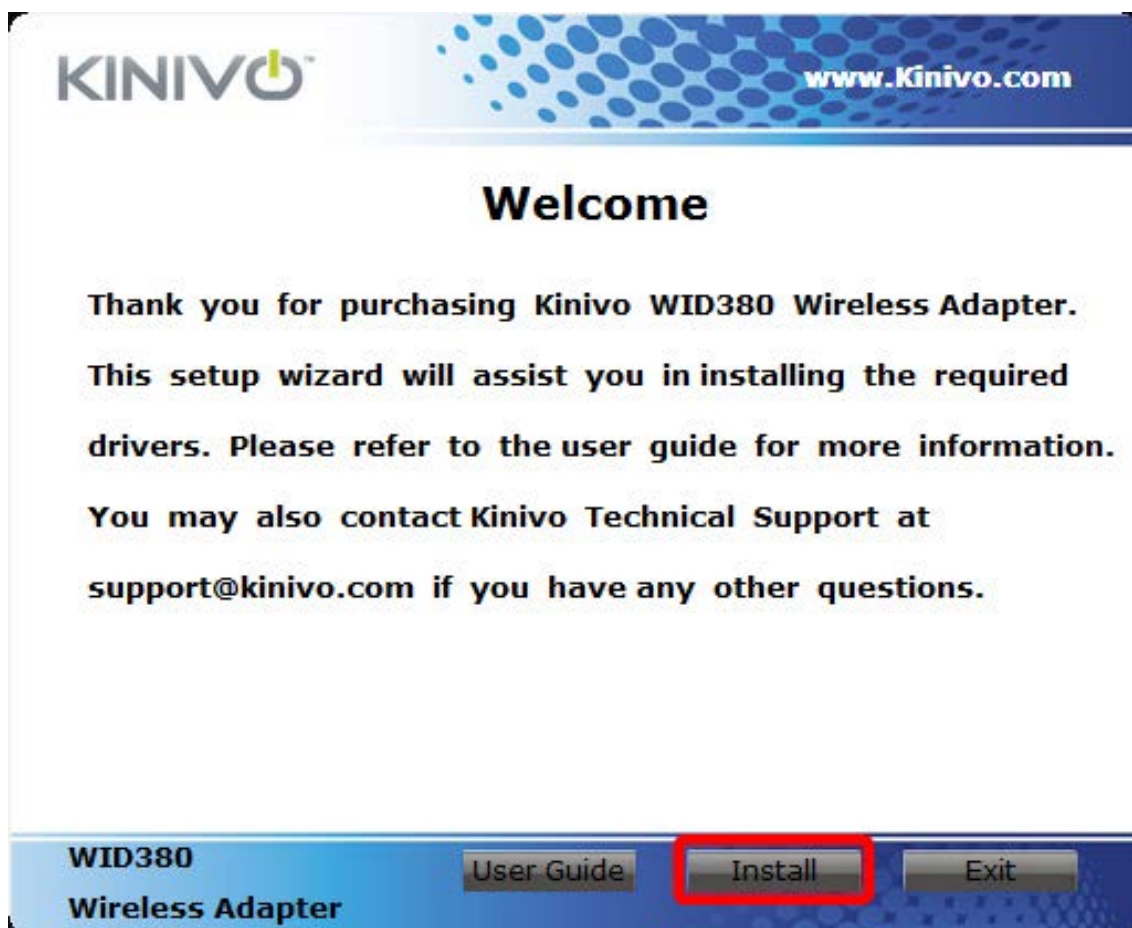


3. Accept the agreement and press Next.

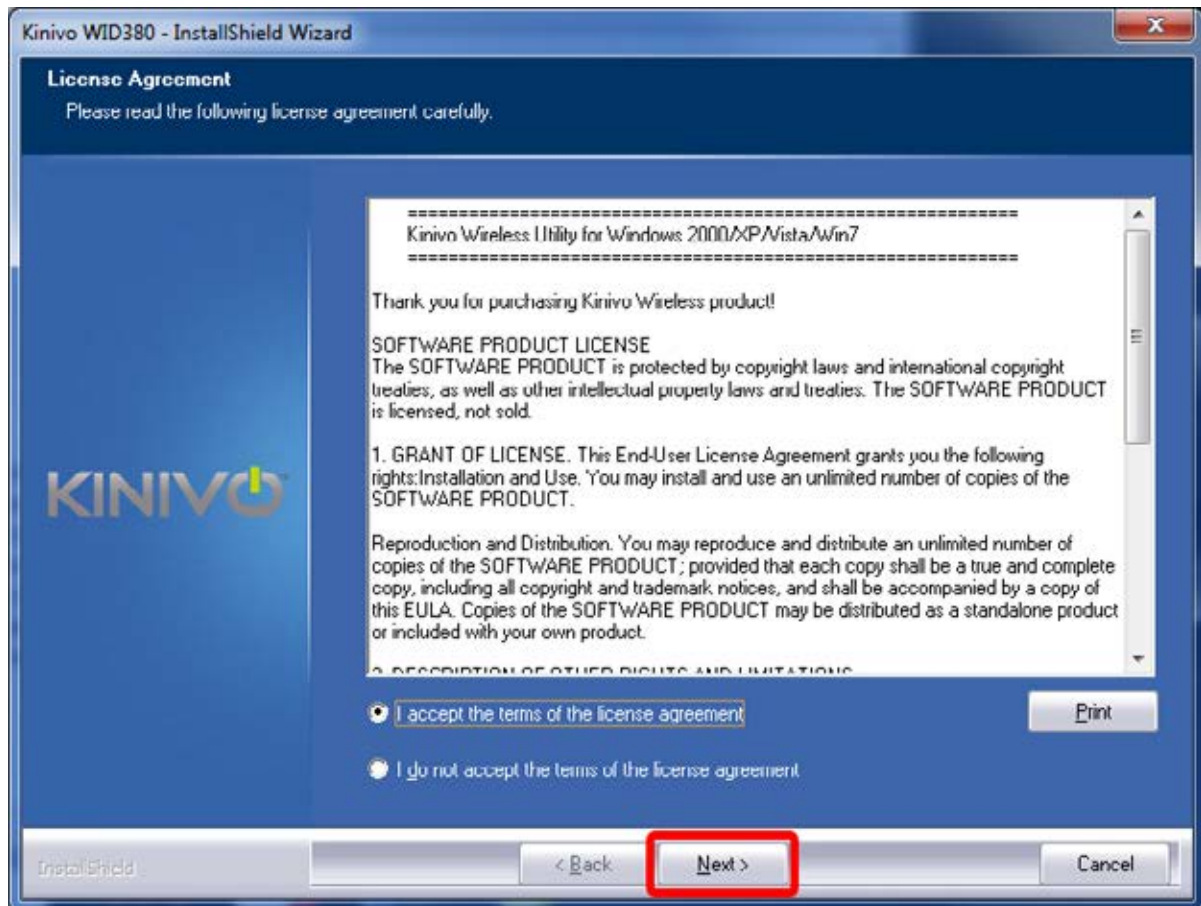


4. Click Install to continue.

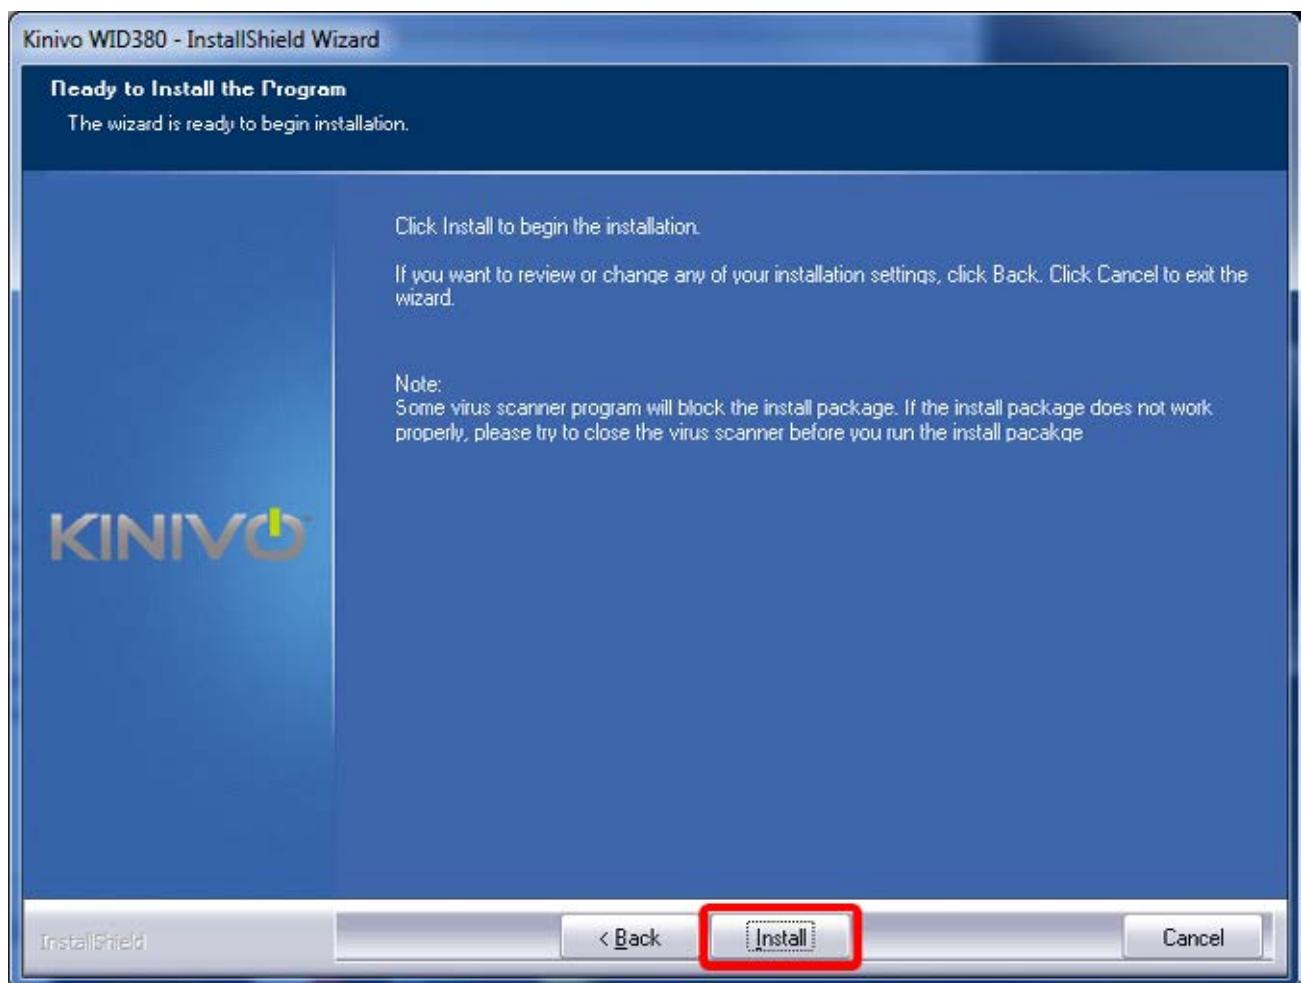

5. The installation process will happen. It may take several minutes depending on the speed of your computer.

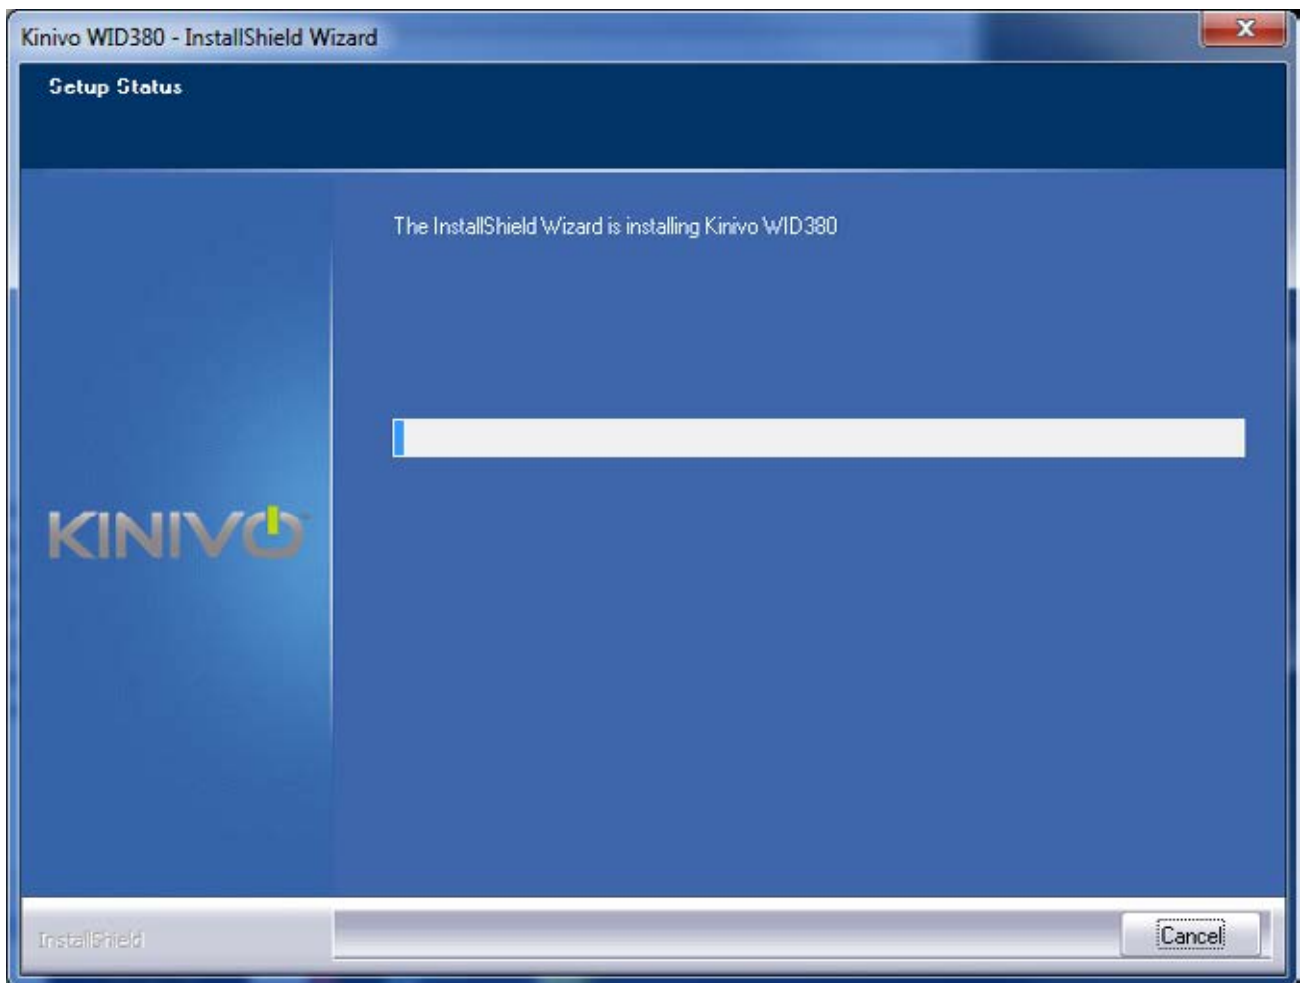


- When the process is complete, select Yes, I want to restart my computer now. Then press Finish.

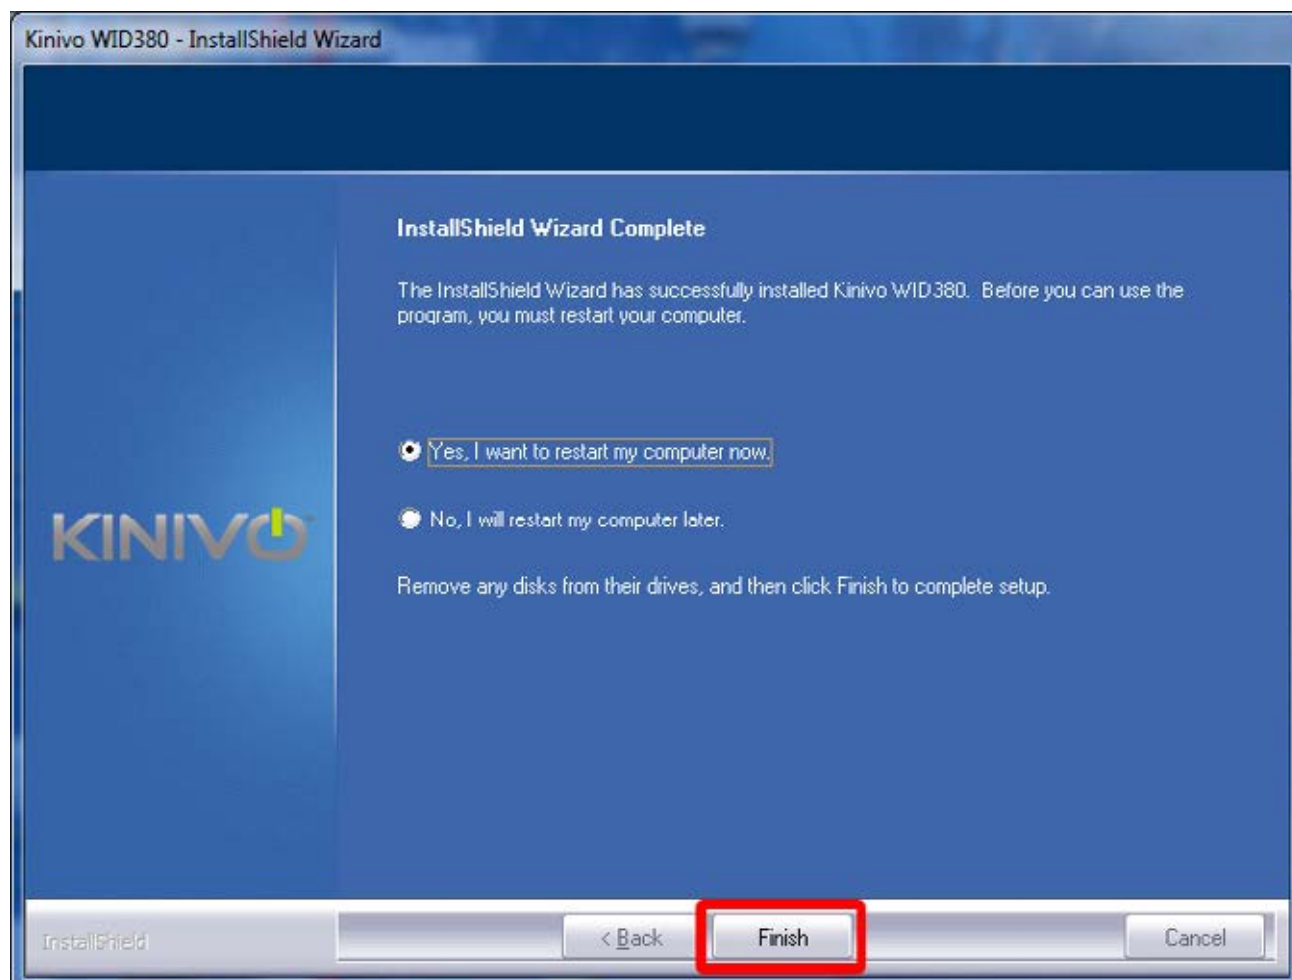

- After the computer has restarted, the driver installation is complete.



2. Connecting to a wireless network (Windows 7)

- To start the connection process, locate the Wireless and Network status icon in the system tray in the bottom right corner and left click the icon.

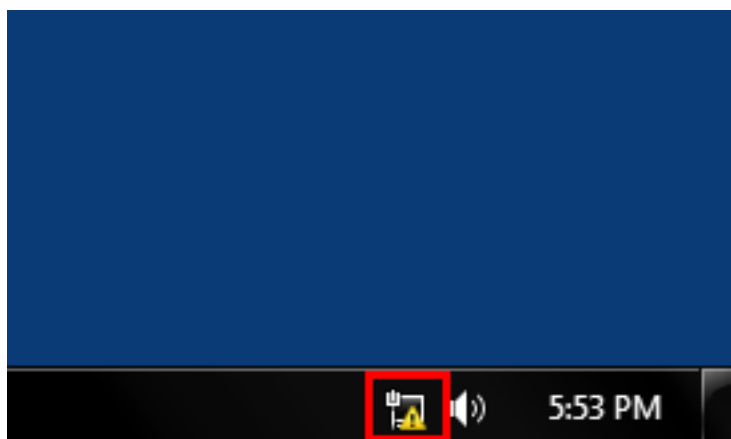


Alternatively, you can access the same menu by navigating to Control Panel > Network and Sharing Center > Connect or disconnect.

2. Select your wireless network from list by left clicking it, then press Connect.

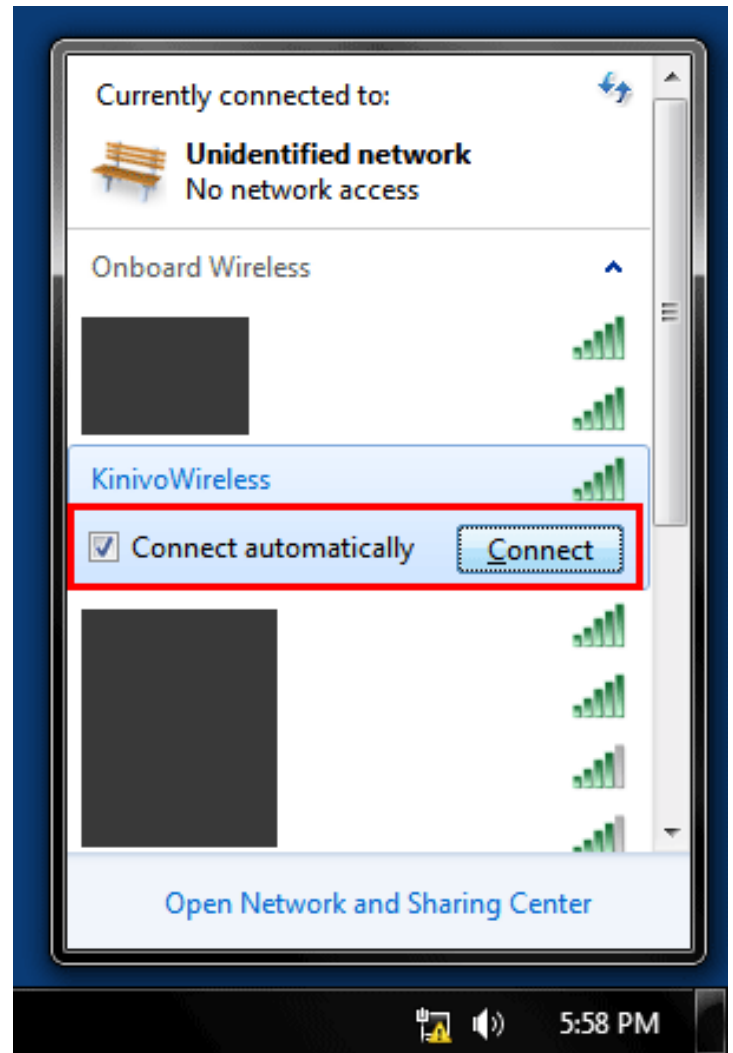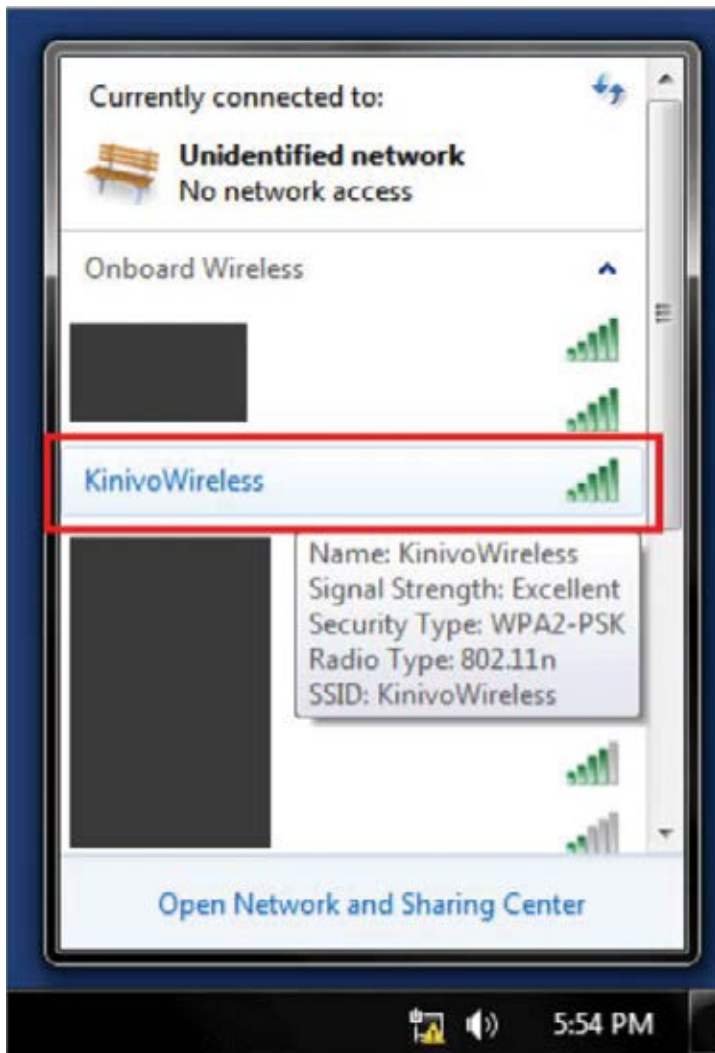

3. If prompted for a password, continue by entering your password and press OK.

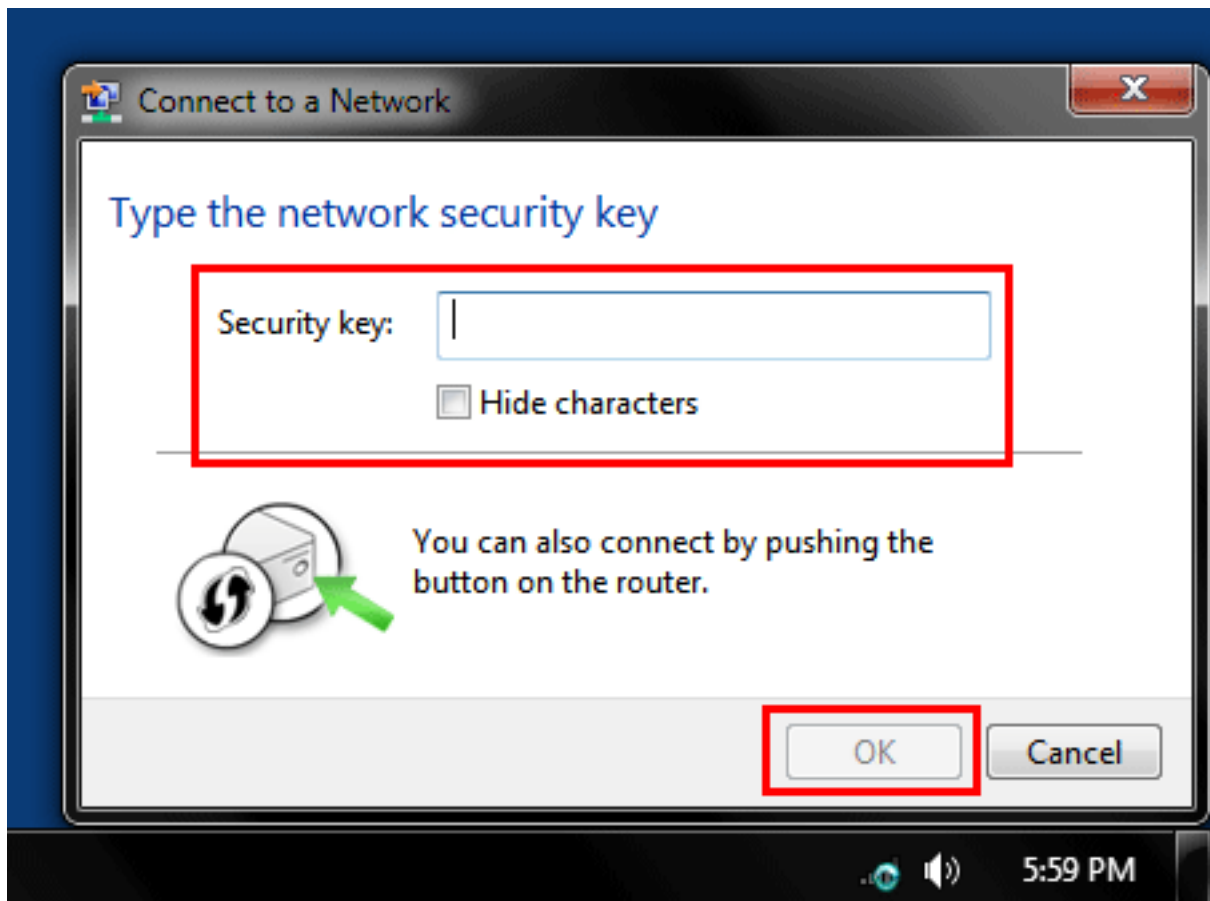


4. Your computer will have connected to your wireless network after few seconds.




3. Installing on Mac OS X (10.5 and newer)


1. Insert the Kinivo Software CD and navigate to the Kinivo CD directory. Alternatively, you can download the drivers from support.kinivo.com.

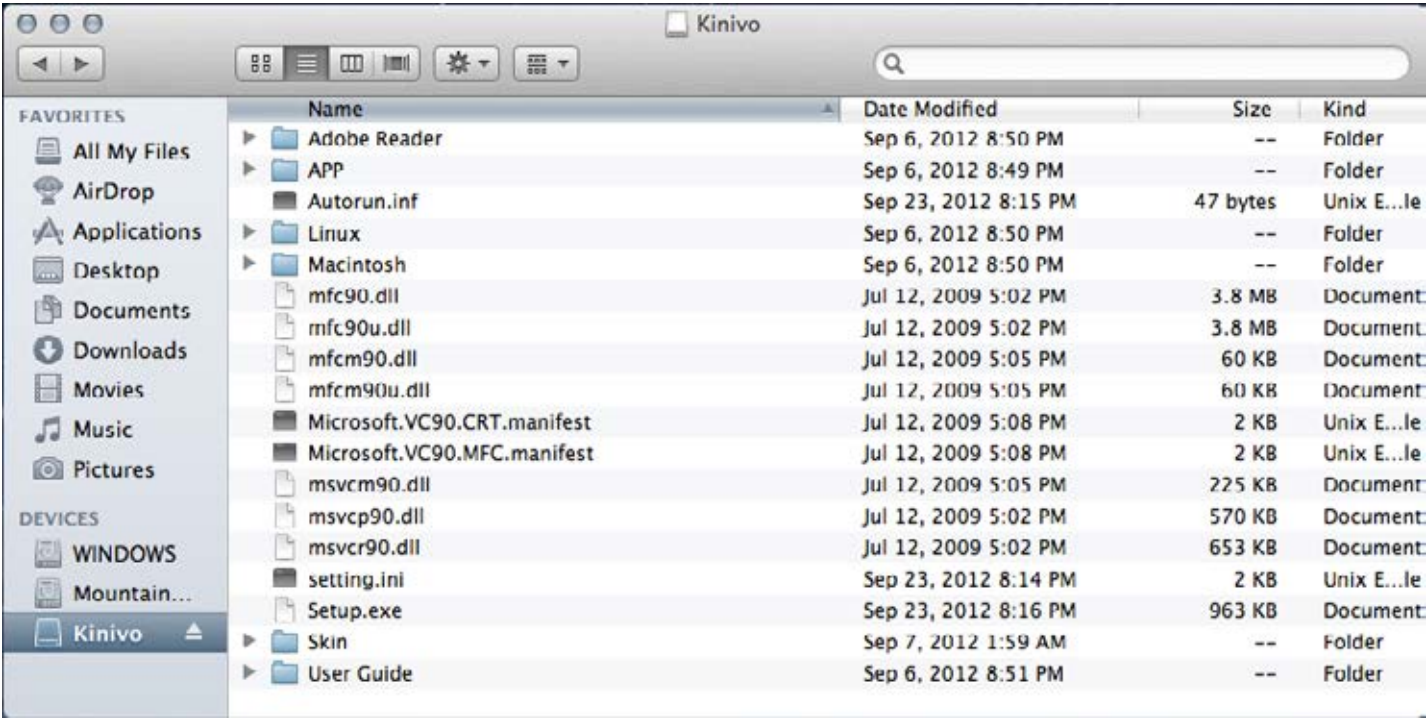


2. Under the Macintosh directory, double click on the RTUSB D2870-4.1.8.0 UI-4.0.6.0_2011_10_21.dmg file.

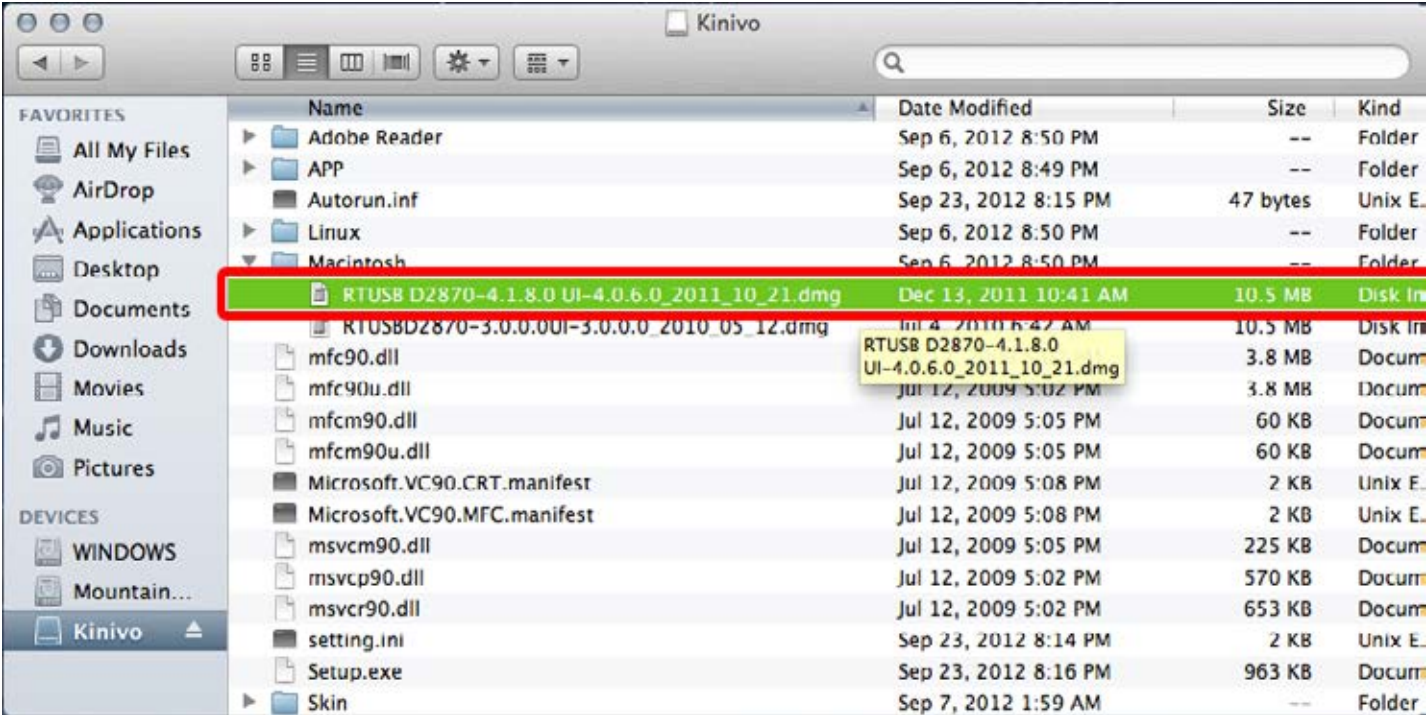


3. Under the RTUSB_RalinkV4_Installer drive, locate the folder for your specific version of Mac OS X and open it by double clicking. You can find the version of OS X by clicking the upper left Apple icon and selecting About This Mac.

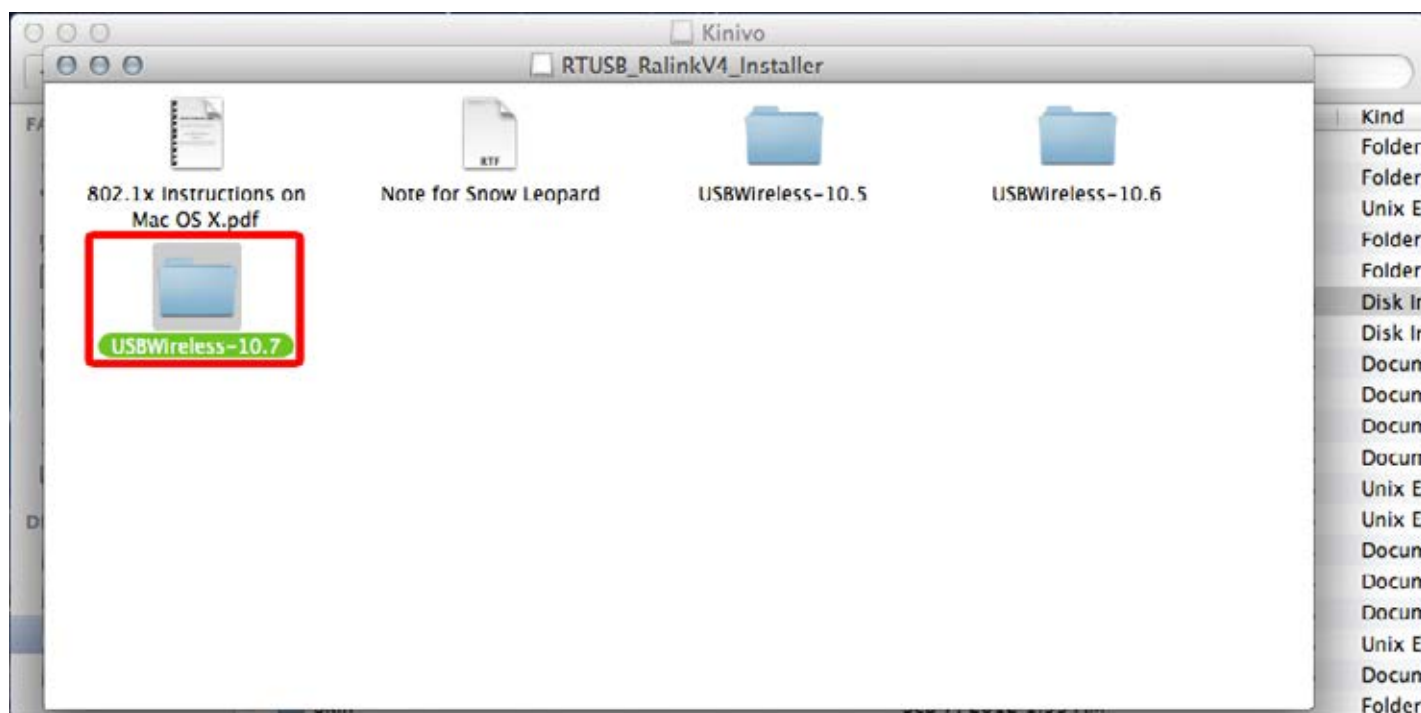


4. For Mac OS X, double click on the USBWireless-Lion.pkg file to begin the installation.

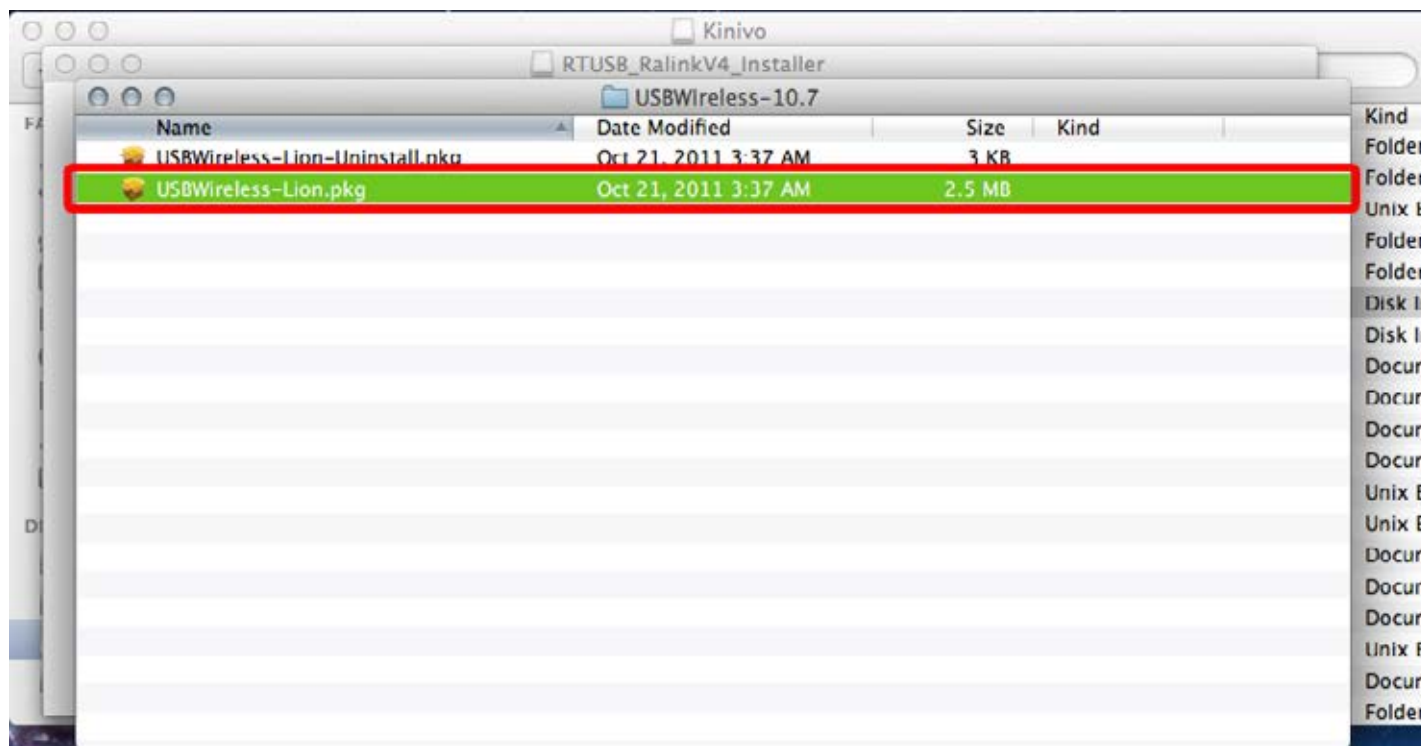


5. Continue by reading and following the prompts with the Wireless Utility installer.

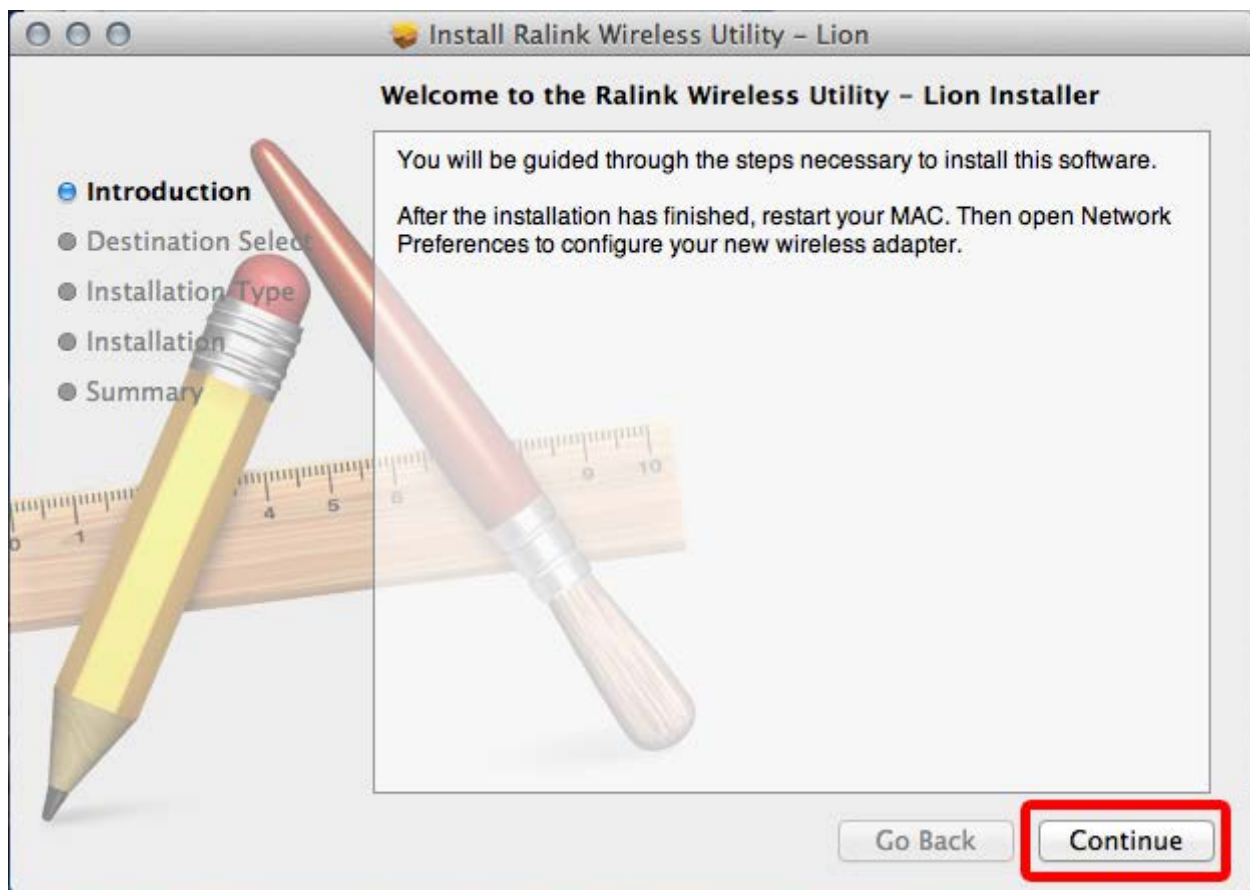

6. After the installation is complete, restart your computer.

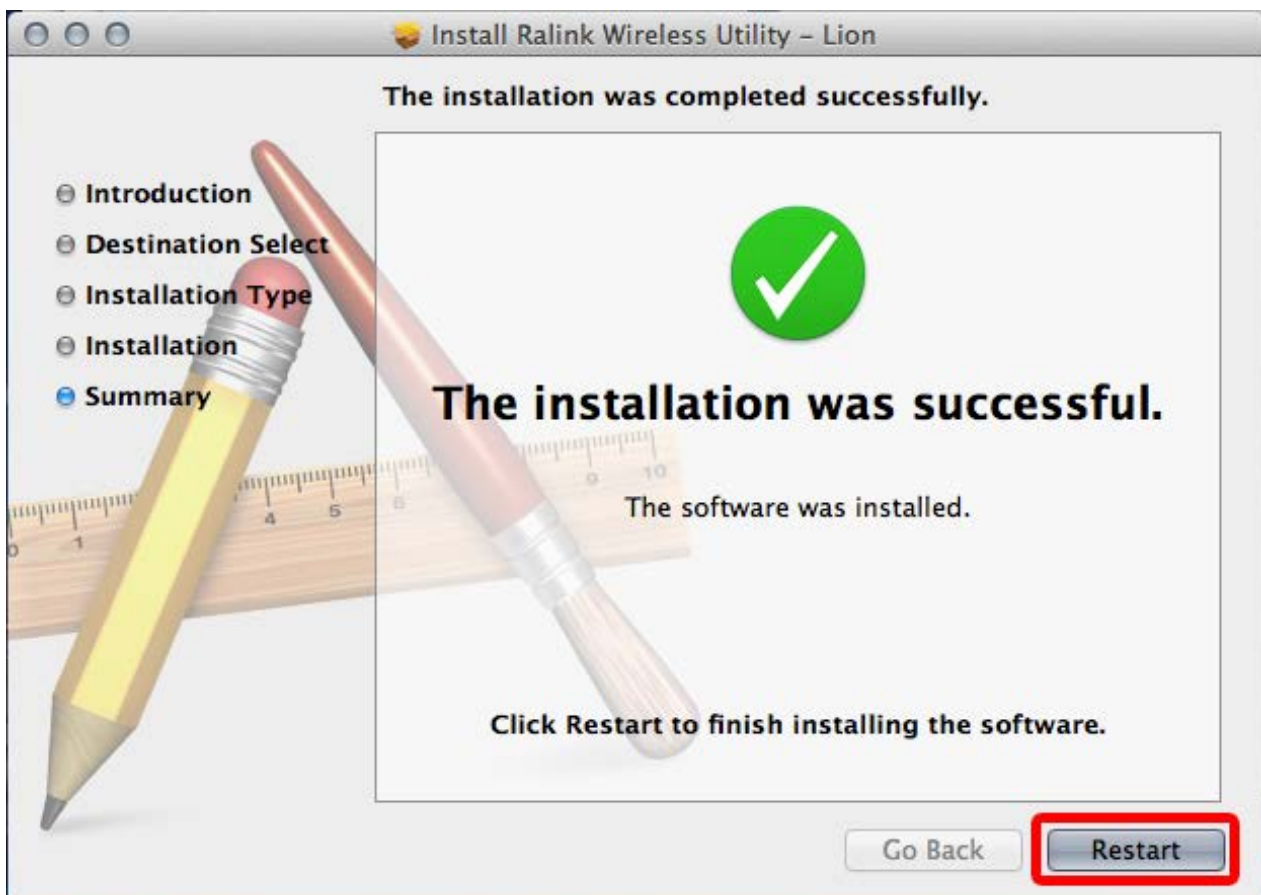

- After the computer has restarted, insert the WID380 Wireless adapter and the Wireless Utility will automatically open and scan for nearby wireless networks.

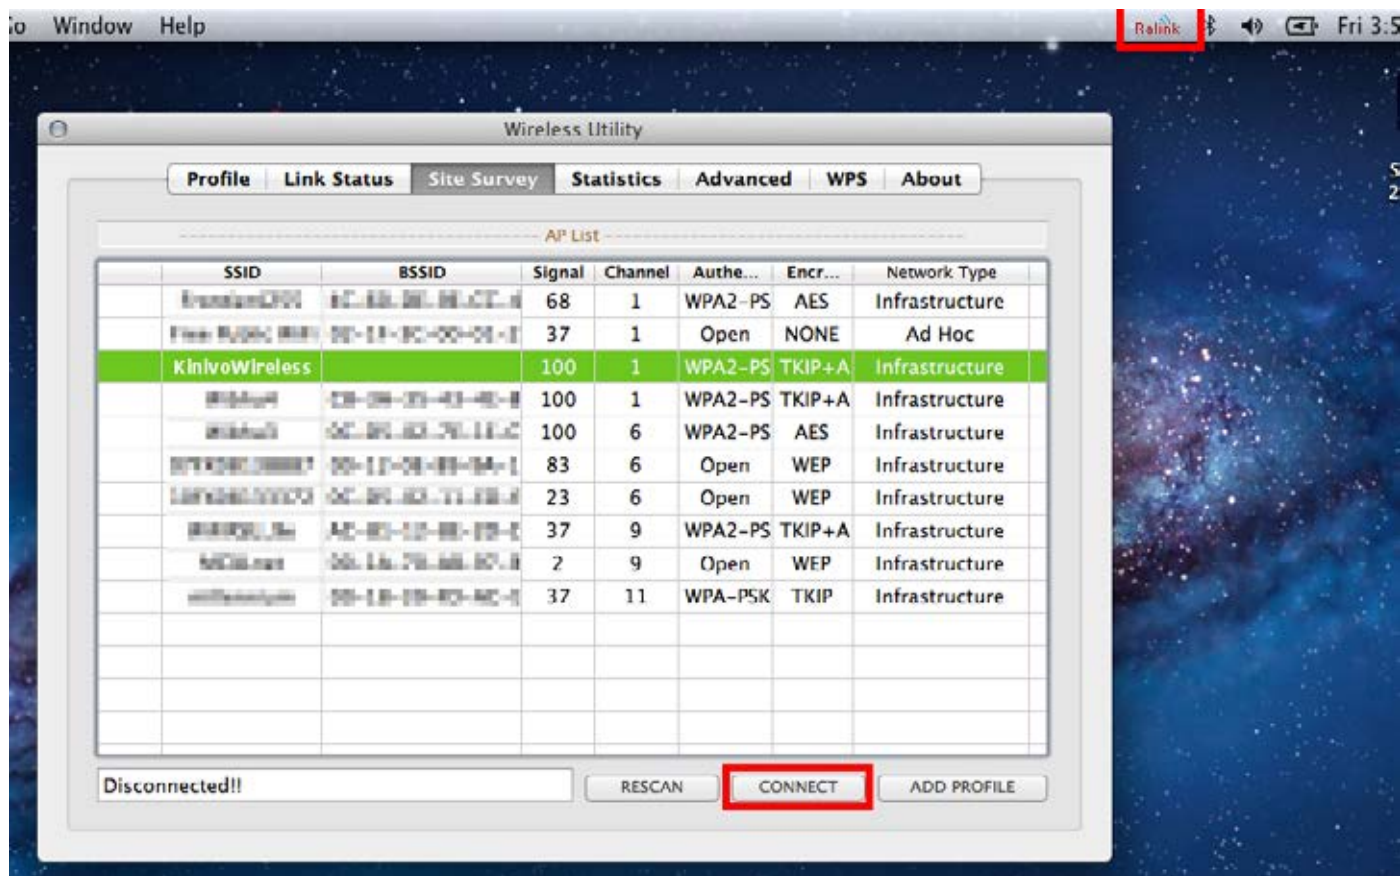

4. Installing on Linux (Kernel 2.6 and newer)

Please note that these instructions may need to be modified for some Linux distributions.

- Insert the Kinivo Software CD and open a terminal if not already opened. Alternatively, you can download the drivers from support.kinivo.com.
- Untar the linux drivers to the home directory.

```
tar -xvf /media/cdrom/Linux/2011_0719_RT3070_RT3370_RT5370_RT5372_Linux_STA_V2.5.0.3_DPO.bz2
```

- Change to the install directory.

```
cd ~/2011_0719_RT3070_RT3370_RT5370_RT5372_Linux_STA_V2.5.0.3_DPO
```

- Make the file with root access. Please note, if this does not work, you may have to edit the Makefile based on your distribution.

```
sudo make
```

- Install the drivers using the following command

```
sudo make install
```

- Reboot your computer.

```
sudo shutdown -r now
```

- After the computer has restarted, the driver installation is complete.

Troubleshooting and FAQ

1. Nothing happens when the WID380 is plugged in

- Plug the WID380 into another USB slot
- Restart your computer
- Reinstall the drivers from the Software CD

2. Installer is not detecting the WID380

- Plug the WID380 into another USB slot
- Restart the computer

3. After selecting a wireless network, I'm unable to connect

- Delete any stored wireless settings on your wireless configuration
- Restart the computer
- Try to reconnect to the wireless network
- You may need to adjust settings on the wireless router that you are trying to connect to.

4. I can't see any wireless networks

- You may be out of range of your wireless network. Get within 5 to 10 feet of your wireless router to determine if you are out of range.
- The router you are trying to connect to may not be broadcasting on 802.11g/b/n. You may need to adjust the settings on the router that you are trying to connect to.

5. Slow connection speed or constantly dropped connections

- There may be wireless interference. You may need to change the wireless channel on your routers settings.
- Moving closer to the wireless source will reduce interference.

6. My connection shows a lower link speed

- Your router may not be configured to provide 802.11n.
- You may be out of range of the router.
- Other wireless devices on the network may be decreasing your link speed.

If at any point you are unable to resolve your issue, you can contact Kinivo Support via email at support@kinivo.com. You may also visit www.kinivo.com or support.kinivo.com for more information.

Technical Specifications

1. Hardware Features

| | |
|-------------------------|--------------------------------------|
| Standards | 802.11n, 802.11g, 802.11b |
| Band | 2.4GHz |
| Max Wireless Link Speed | 300Mbps |
| Interface & Speed | USB2.0 |
| Button | WPS |
| LED | LINK/ACT |
| Antenna | Internal 2T2R non-detachable antenna |

2. Wireless Features

| | |
|-------------------|-----------------------------------|
| Channel | 11 channels |
| Channel Width | 20MHz, 40MHz |
| Transmit Power | 14dBm |
| Wireless Security | WEP, WPA, WPA2, WPA-PSK, WPA2-PSK |

3. Other Information

| | |
|-----------------------|-----------------------------|
| Operating Temperature | 32 ~ 104 Fahrenheit |
| Storage Temperature | -40 ~ 158 Fahrenheit |
| Operating Humidity | 10% ~ 90% RH non-condensing |
| Storage Humidity | 5% ~ 90% RH non-condensing |
| Certificates | FCC, RoHS, CE, WEEE |

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Note:

1. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment.
2. To avoid unnecessary radiation interference, it is recommended to use a shielded RJ45 cable.



CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures. This device complies with EU 1999/5/EC.

Note:

1. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment.
2. To avoid unnecessary radiation interference, it is recommended to use a shielded RJ45 cable.

The product can be used without restrictions in the following countries: all EU member states except France and Norway. The product can be used with limitations in the following countries: France (for indoor use only) and Norway (20 km in the center of Ny-Llesund).

Warranty

1 Year Limited Hardware Warranty.

Kinivo hereby warrants to the customer of record that this product is in good-working condition and free from defects in material or workmanship under normal use for duration of 1 year after the date of purchase. The product has been tested to meet the highest quality standards in each testing category. In the unlikely event that the product proves to be defective, Kinivo will repair or replace the product free of charge. If replacement is required and if Kinivo then no longer carries the same product, then Kinivo reserves the right to substitute the product with a replacement product of like quality and size, suitable for the intended use.

This warranty is limited to repair or replacement of the mentioned product only, is non-transferable and does not extend to any product damaged by misuse, natural disasters or any other circumstances beyond Kinivo's control. The warranty does not cover or provide for the reimbursement or payment of incidental or consequential damage resulting from breach of the limited warranty described above. Except for the limited warranty described above we offer no other warranties expressed or implied, and other than limited warranty expressly contained herein, we hereby disclaim any and all warranties, including without limitation any implied warranties of merchantability, suitability or fitness for a particular purpose.

If your product is not functioning or you have any concerns please contact Kinivo Support before returning the product.

Contact Us

You can reach Kinivo Support by writing to support@kinivo.com. You may also visit www.kinivo.com or support.kinivo.com for more information.

KINIVO®

1 year limited
hardware warranty

www.kinivo.com

Technical Support (Email) : support@kinivo.com

